
Operating Instructions




Key:

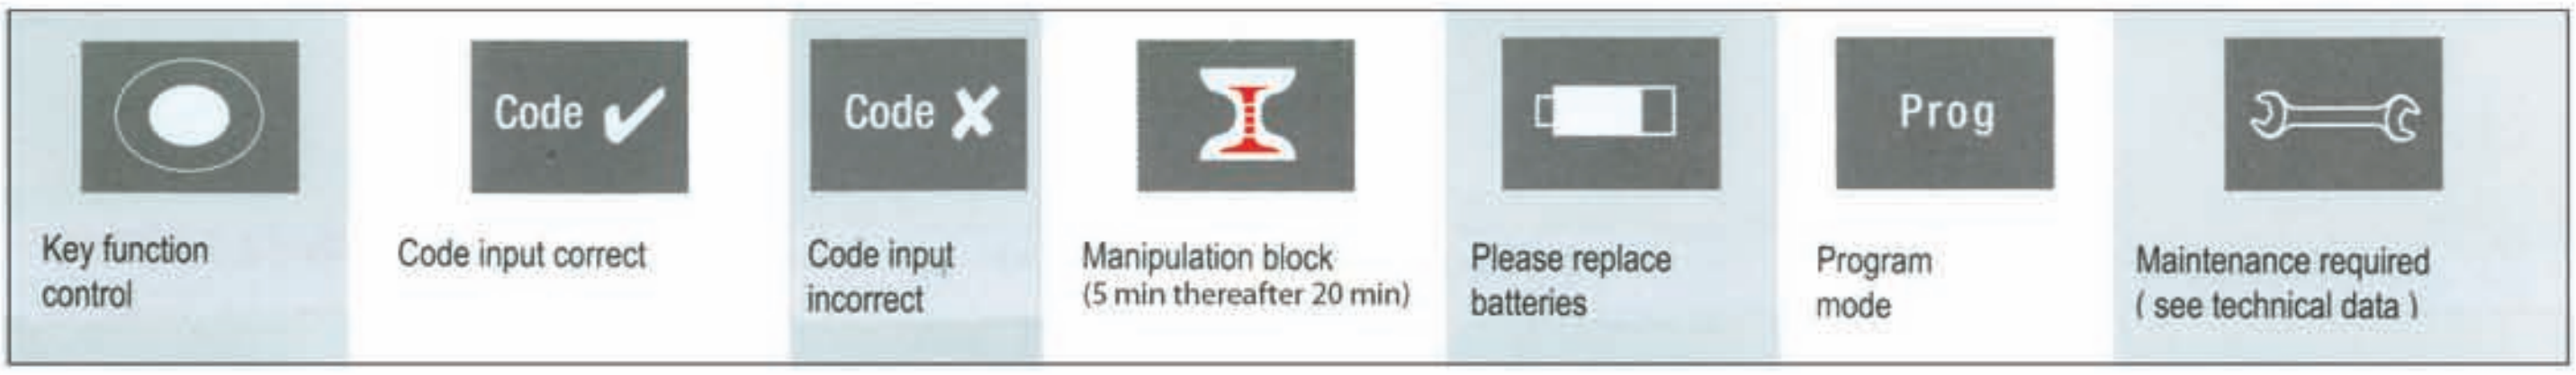

Opening the safe:

Step 1 | Step 2 | Step 3

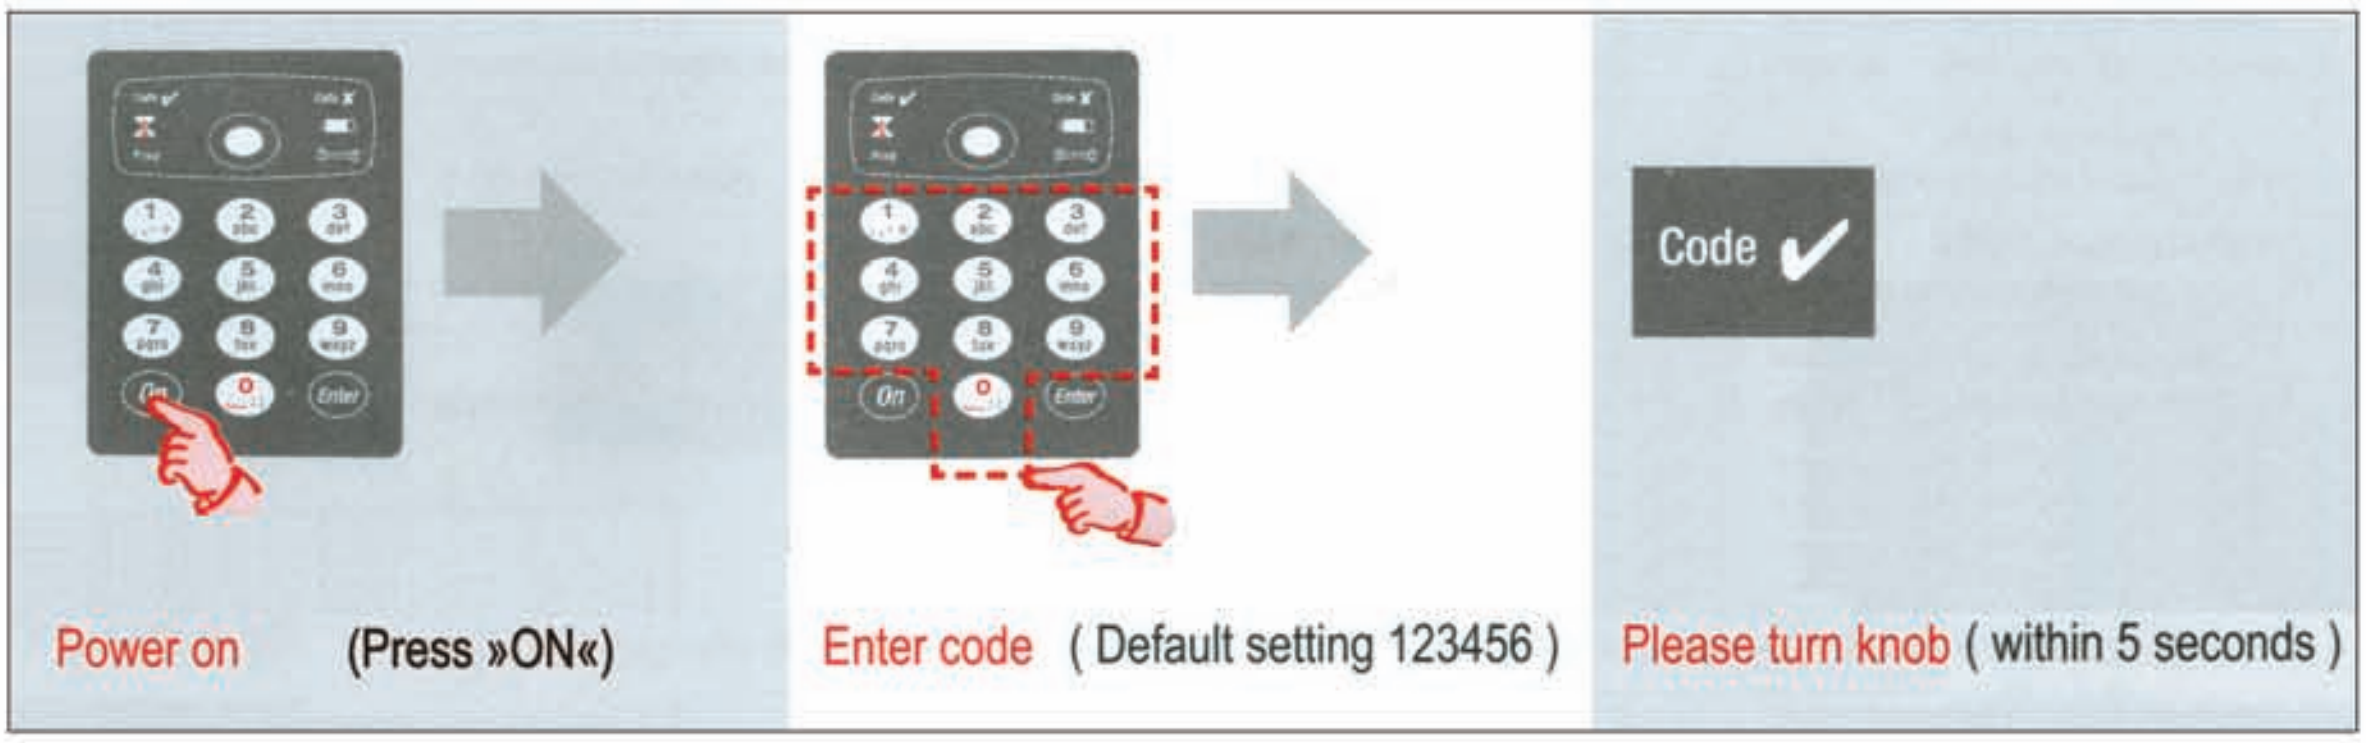

Code input incorrect.




Press « ON » and enter correct code.


Changing Codes:

Important — Enter code changes only with door open ! Do not enter personal data (e.g. birth date, telephone no.)

Step 1 | Step 2 | Step 3 | Step 4

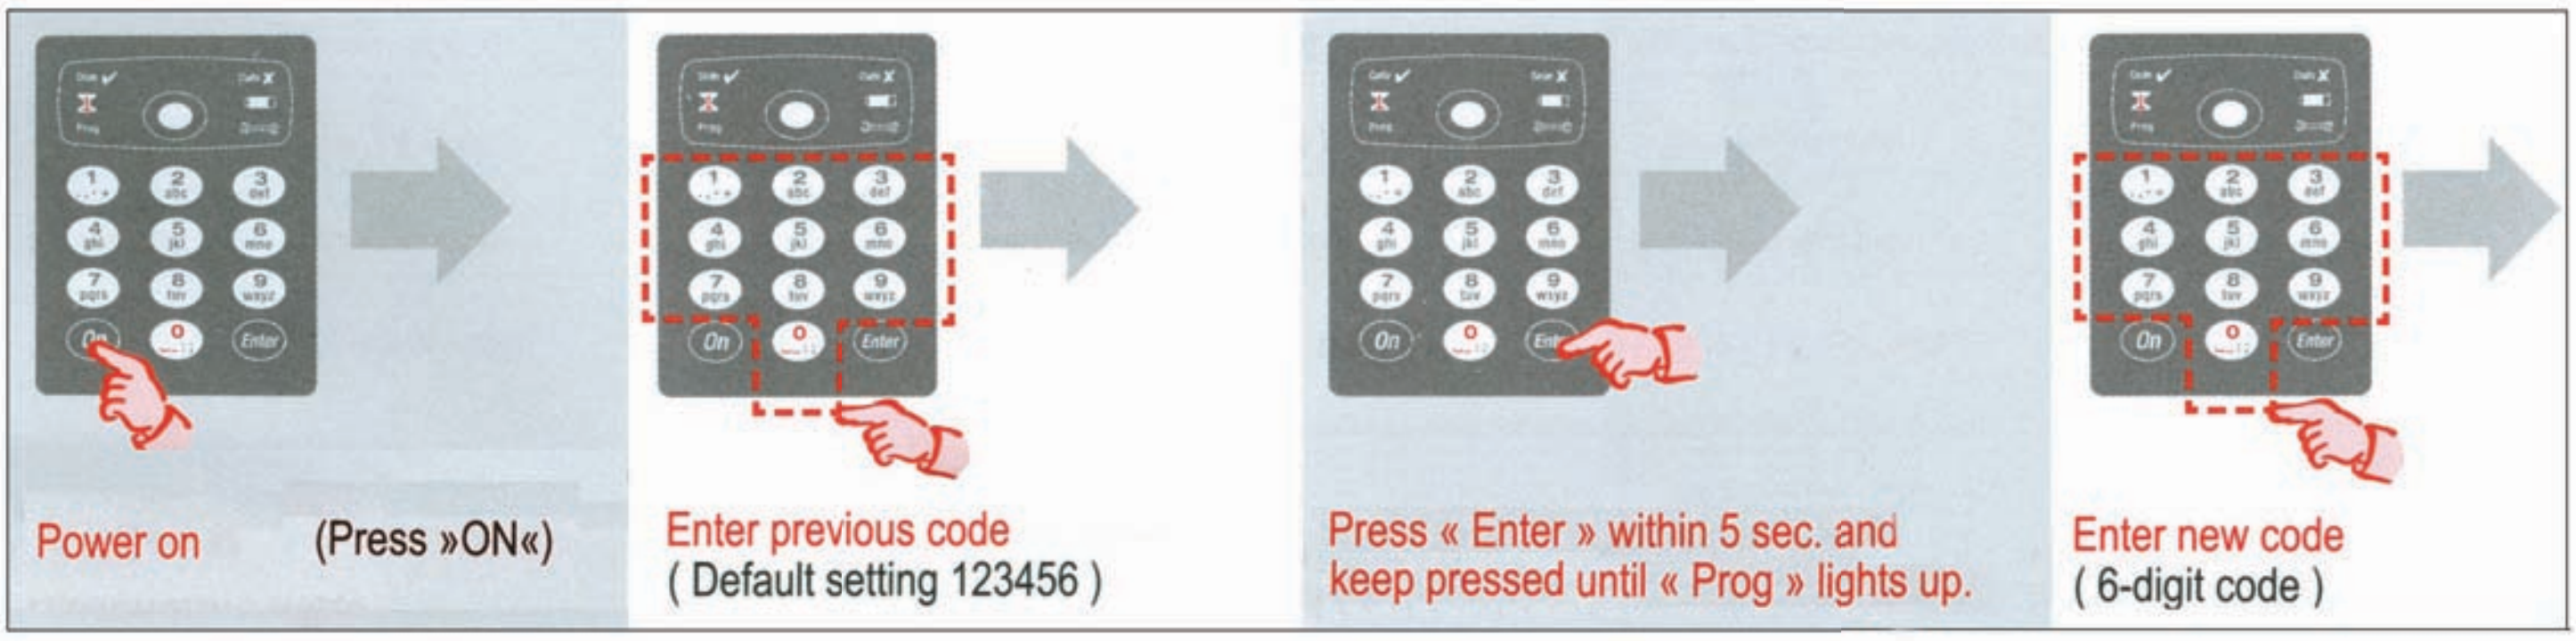

Step 5 | Step 6 | Step 7 | Step 8 | Step 9

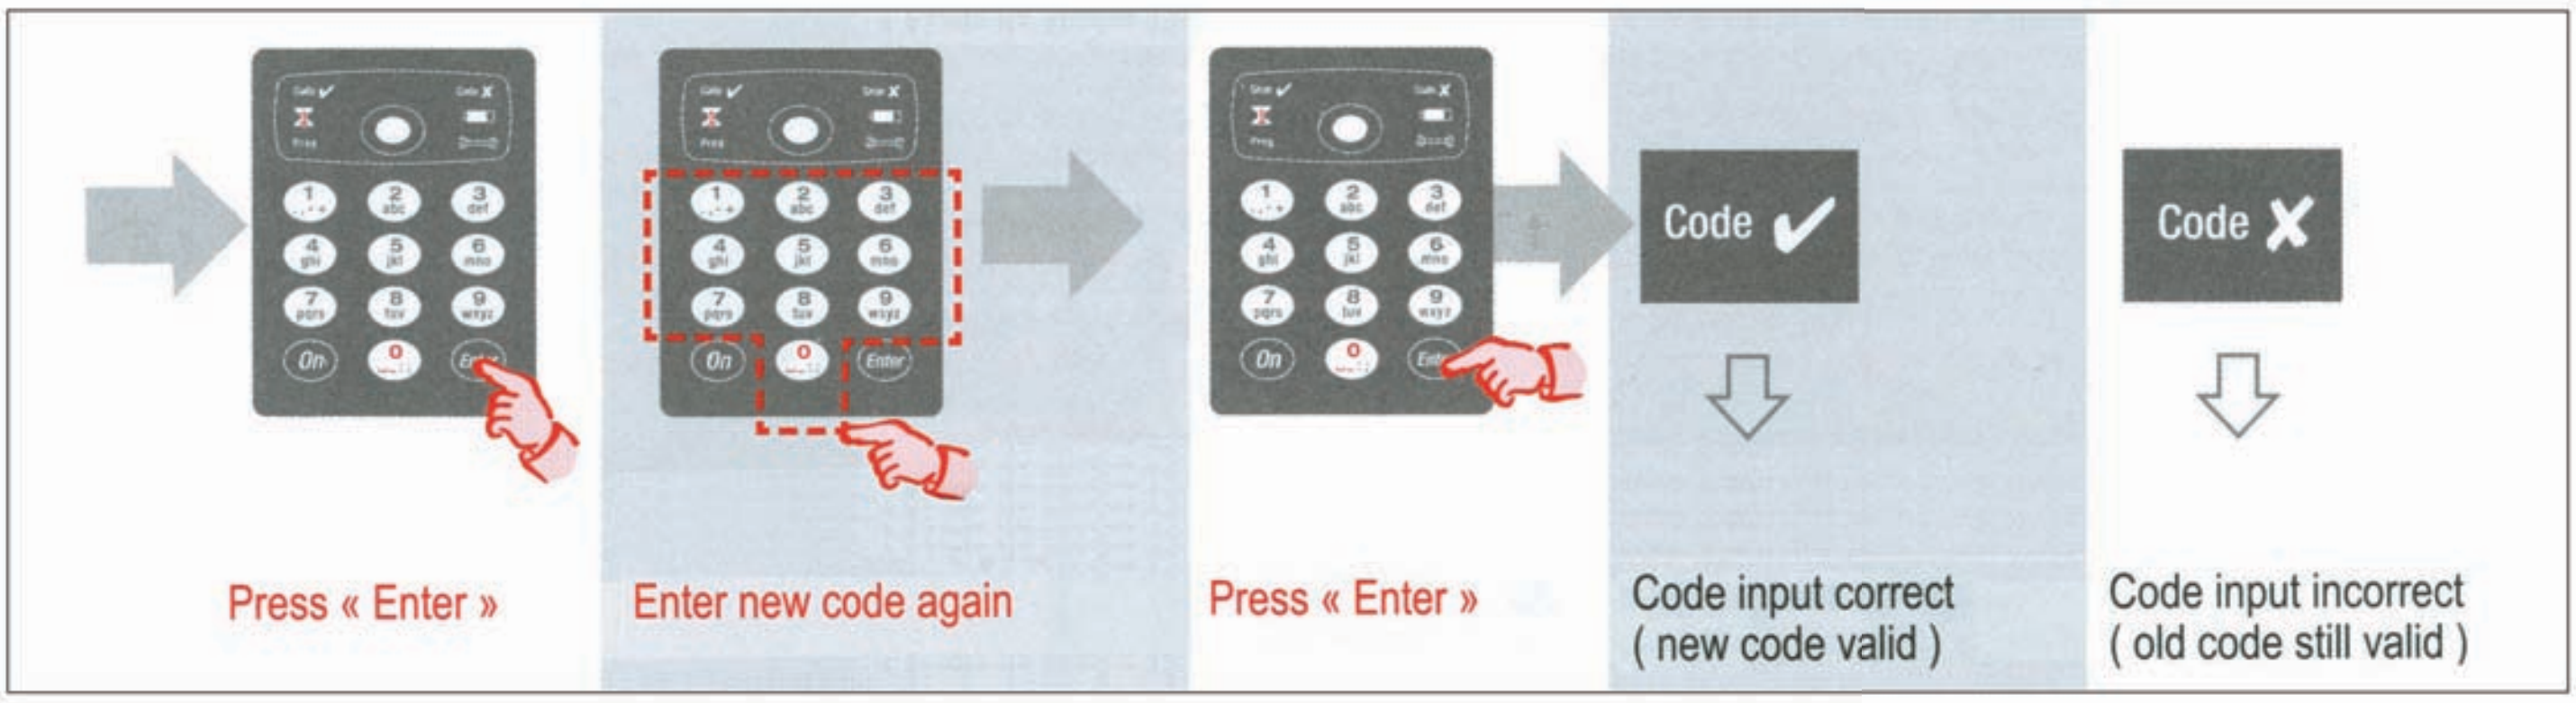



BURG-WÄCHTER KG
Altenhofer Weg 15
D-58300 Wetter
Germany
www.burg-waechter.de
info@burg-waechter.de

BA-TSE Basic / SecuTronic Basic - NM 10/03

Technical Information:

Technical data

SecuTronic 8 Basic:
Electronic lock as per EN 1300 Class: B
Combination lock with 1.000.000 real possibilities.

6-digit code

Manipulation block
(block active if wrong code entered 3 times):
TSE 3000 Basic: 1 min., thereafter 3 min.
SecuTronic Basic : 5 min., thereafter 20 min.

Power supply:
TSE 3000 Basic: 3 MIGNON batteries, LR6, AA, alkaline
SecuTronic Basic: 3 MICRO batteries, LR03, AAA, alkaline

Maintenance required:
The system has established maintenance requirement.
Please contact your local dealer.

Optimal environmental conditions:
- 15°C / + 40°C / up to 95% relative humidity
(no condensation)

Permitted temperature range: - 20°C / + 50°C

When installed on external doors, the TSE 3000 Basic should be protected from constant exposure to the elements (e.g. by a canopy).

Typographical errors, omissions and changes reserved.

Changing Batteries:

Battery replacement



Dispose batteries in an environmentally safe manner.



SecuTronic Basic